


Instructions

Tumble dryer ProLine T 9-16 VP

1. Fill the machine

Fill the drum with laundry and close the door firmly.

2. Select program

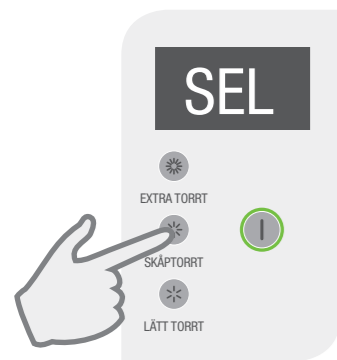

The display shows SEL (Select). Select an automatic program by pressing the buttons. 1, 2 or 3 is shown in the display.

The laundry is dried to the selected moisture level and the tumble dryer turns off automatically.

3. Start

Press the start button

4. Cancel or fast forward program

To fast forward to cool down press

The program stops after 5 min.

To cancel the program without cool down, press twice on

5. Clean lint filter

Note! The tumble dryer is equipped with a double lint filter. It is important that both filters are cleaned after each drying.

Release the front filter. Clean the rear filter and the space between the filters. Put the filter back and close the door.

Button	No	Program
	1	EXTRA DRY For particularly thick or multilayered fabrics.
	2	CABINET DRY For laundry which will not be ironed
	3	LIGHTLY DRY For laundry which will not be ironed or only lightly ironed

Note! The tumble dryer is equipped with a double lint filter. It is important that both filters are cleaned after each drying.

Open the door to access the filters.

