

INSTRUCTIONS

Drying cabinet ProLine TS 63 E/TS 93 E

User instructions



Select program

Change program with P-button.



Start /cancel program

Push start /stop button. Open doors to pause.

Programs

Automatic programs.

The laundry is dried to selected level of dryness. Program stops automatically.



IRON DRY

For laundry to be ironed.



SLIGHTLY DRY

For laundry that will not be ironed or only lightly ironed.



CABINET DRY

For laundry that will not be ironed.



EXTRA DRY

For particularly thick fabrics.

Select drying time manually



TIMED DRYING

Set the drying time manually.



Increases the time by 5 min/push.

Additional functions



GENTLE DRYING

For delicate textiles. The temperature is reduced.



Fast forward to cool down phase.