Instructions

StreamLine™
tumble dryer T 7155 E/K

1. Load laundry

Press the door-opening button.

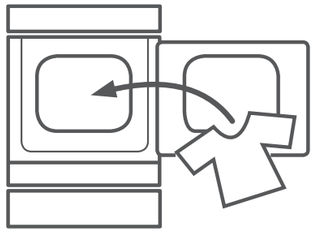

2. Choose program

Flashing buttons are selectable.

Time programs

Select the drying time by repeatedly pressing the button up to max. 2 h 30 min. 5 min/push

Automatic programs		T 7155 E time (min)	T 7155 K time (min)
	Iron dry For laundry to be ironed. Bed and table linen, towels, t-shirts, polo shirts, work wear.	30	41
	Light dry For laundry which is not to be ironed or only lightly ironed. T-shirts, polo shirts, dresses, trousers, work wear.	36	53
	Wardrobe dry For laundry which is not to be ironed. Flannels, tea towels and towels, bed linen, underwear, cotton socks.	41	57
	Extra dry For particularly thick or multilayered fabrics. Towelling bathrobs and bed linen. NO underwear or socks.	45	63

3. Start

Press the start button.

Abort

Press the fast forward button to the end of the program.

Open the door by pressing the door-opening button.

4. Clean the filter

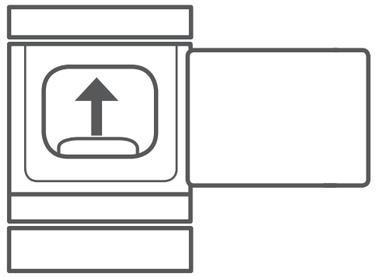

Pull out the filter to remove the fluff.

© PODAB V0904

PODAB
www.podab.se